


MidMade®

LEX

Loft ladder



Assembly Instructions

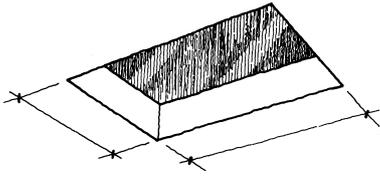

1.

(Check that the hole in the beams is 15-20 mm larger than the outside measurements of the frame of the loft ladder. The crossbars into which the loft ladder is to be nailed must be at least 32 mm in width and well-fastened.)

2.

Two persons are required to insure a quick and safe assembly. One of the fitters goes up into the attic on a ladder (not the ladder to the hatch) with a hammer, nails (or screws), wedges and measuring tape.


The width of the hatch plus 10 mm.

3.

Hoist the loft ladder into the attic.

4.

Assemble the two prefabricated supports so that they provide support between the floor and the ceiling. Use blocks on the floor to adjust the height.

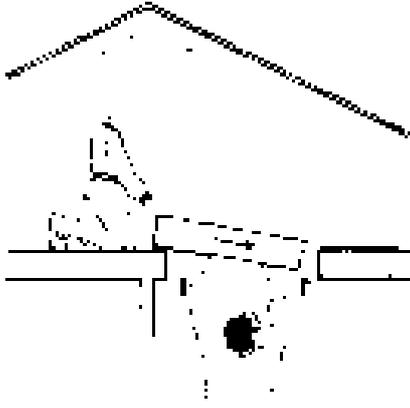

5.

Lift the hatch in position using the two supports. Check that the bottom side of the frame is level with the bottom side of the ceiling.

6.

Place two wedges on the hinge side of the frame and nail the frame on to the wedges, see picture 7.

The hatch can either be nailed (100 mm long nails) or screwed on (100 mm long screws).


Check that the diagonals are exactly the same length.

7.

1. Wedged and nailed (hinge side).
2. Wedged as the diagonals are checked (nailed later when the hatch can be opened and the ladder taken down).
3. Wedged and nailed (open hatch).
- 4 .(open Nailed hatch).


8.

Stuff with rock wool. Nail padding, min. 9 x 45 mm, between the frame and the ceiling.

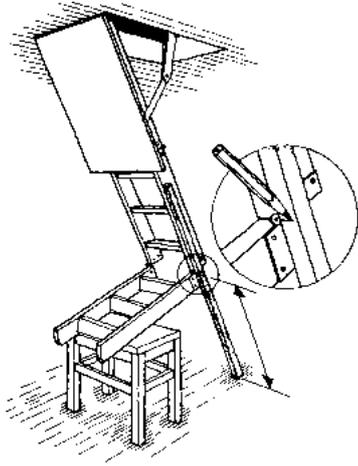


9.

Fold the ladder as shown in the picture and place the lower part on a stool. Measure the distance to the floor with the help of a crossbar. Measure the length along the back of the other part of the ladder with the same gradient as the leg of the ladder. Make a mark at the edge of the end of the ladder.

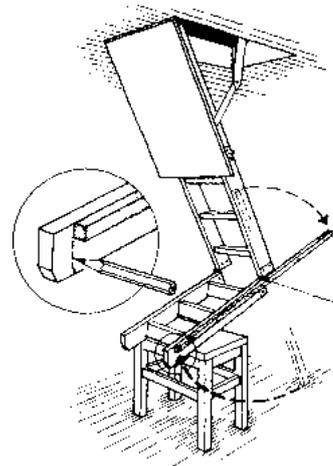

10.

Place the measuring stick on the lowest section of the ladder with the marked line at the upper end. Mark the length on the ladder side at the lower end of the measuring stick.

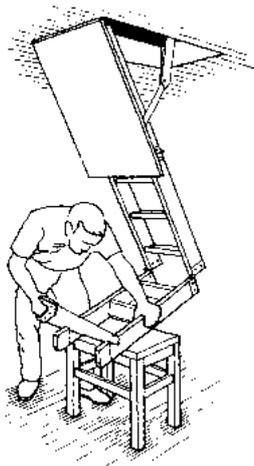

11.

Saw off the ladder at the mark - keep the same gradient as the end had before.

In order to prevent scratches on the floor, fit the protective pads, which are fixed on the cutting templet.

MidMade tillverkas och marknadsförs av:
MidMade is Manufactured and promoted by:
 MidMade wird produziert und vermarktet von:

Samhall AB
 Hantverkarsvägen 2, SE-861 36 Timrå, SWEDEN
 Tel int +46 (0)60 50 41 20 Fax int +46 (0)60 50 41 30
 www.midmade.com E-mail: info@midmade.com