


You will require suitable spanners for M8 and M10 bolts

### Step 1...

After wheeling the step into an open unrestricted area, remove **ONLY** the white tie wraps from the base side members (see diagram 1, highlighted by the red arrows), ensure you do the same for both sides.

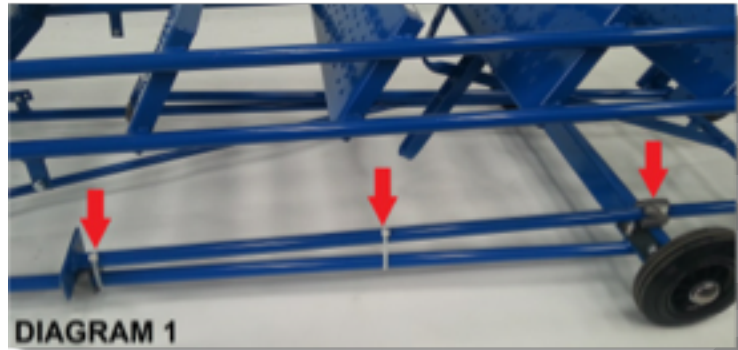

### Step 2...

Leaving the step on its back, open it out to allow the two base side members (see diagram 1, highlighted by the green arrows), to be located on the back axle plates.

On larger size steps some assistance will be needed to safely complete the fixing.

Once the rear axle plates have been bolted together, the step is in a safe and stable condition and can be stood upright.

You can now cut the remaining black cable ties to release the side cross and diagonal bracing (see diagram 2) which can now be fitted.

### Step 3...

After a final check that ALL metal fastenings have been tightened, the step is now ready for use

Remember to periodically inspect the step for damage, evidence of misuse, bolts are tight and all wheels and castors rotate freely.